

ROTA SLOT


DATA SHEET 1/4

300kg Water Ballast system for 3.5m Anti-Climb Fence Panels



2 X BLOCKS (1 unit)

PRODUCT CODE	RTSLP
DIMENSIONS (MM)	L3500 X D400 X H300
WORKING LENGTH	3456MM
MATERIAL	MDPE
WEIGHT E/F (KG)	E - 26KG / F - 320KG
COLOURS	RED & WHITE / CUSTOM
REFLECTIVE STICKER	OPTIONAL
NO PER 2M PALLET	21 BLOCKS / 10.5 UNITS
NO PER FULL LOAD	294 BLOCKS / 147 UNITS
CSTB WIND SPEED	67.3 MPH

SLOTS TOGETHER

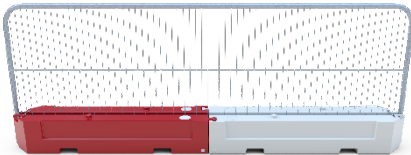


90 DEGREE CORNERS, BOLT FASTENERS,
JOINS WITH STANDARD FENCE CLIPS

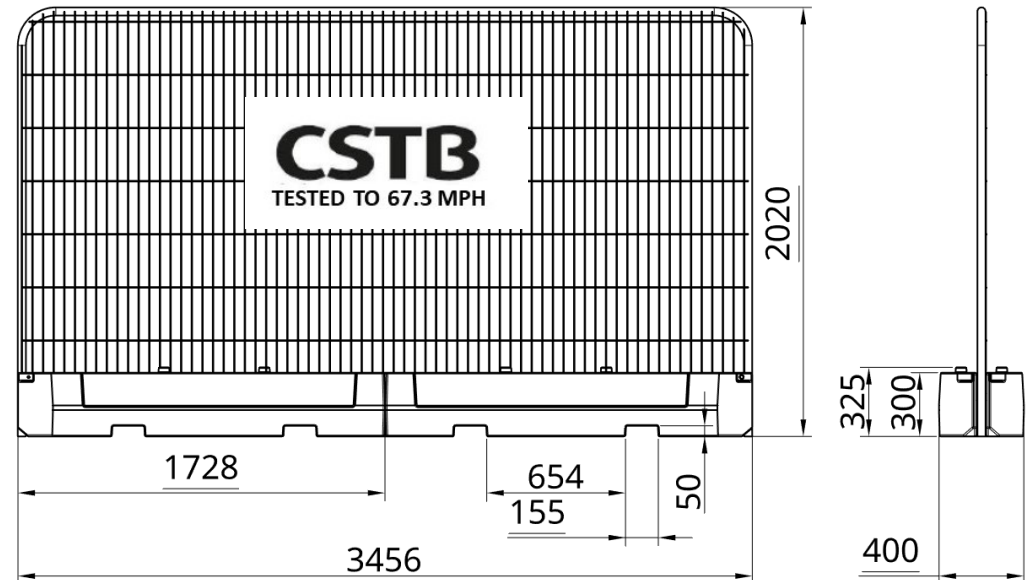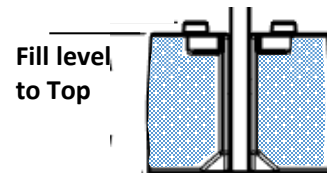

DATA SHEET 2/4


300kg Water Ballast system for 3.5m Anti-Climb Fence Panels

1

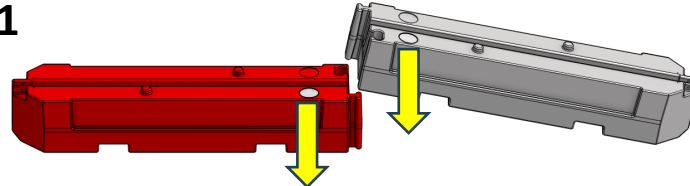


LINK: Interlock Rota Slots, ensure caps are towards filling side


3

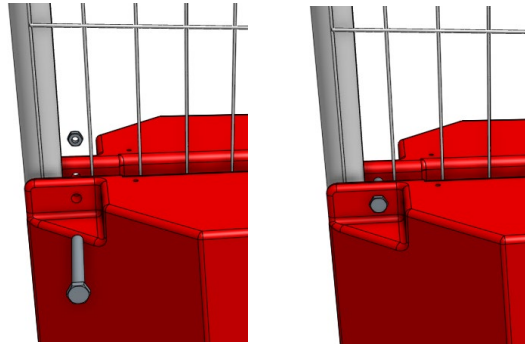


SECURE: Depending on fence bracket, fit bolt OR chain to secure panel, adjust fence position as needed

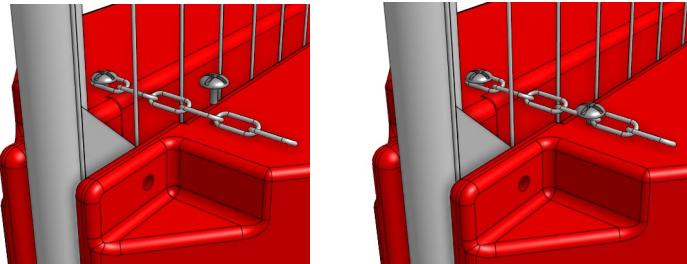



2

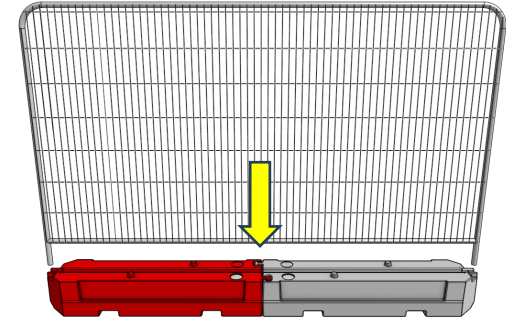

MESH: Insert mesh panel into Rota Slot and align ends as shown

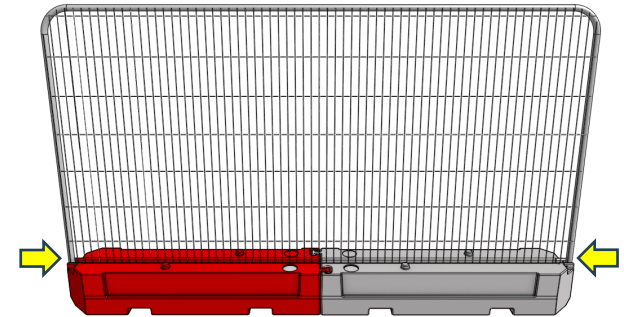

4

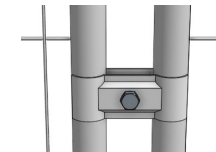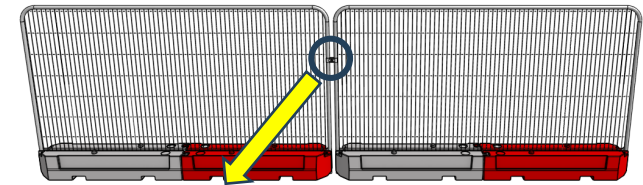


CLIP: Link panels with standard clip, Up to 90-degree corners possible.

DATA SHEET

3/4


300kg Water Ballast system for 3.5m Anti-Climb Fence Panels

5

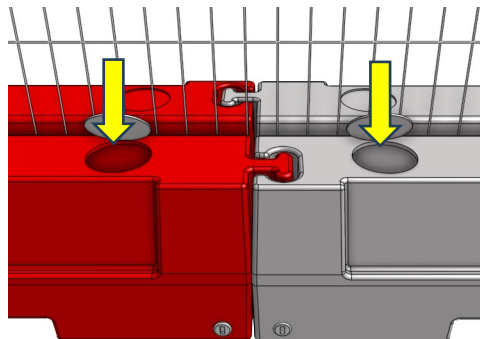

FILL: Lift cap & fill with approx. 195l of water per unit

6

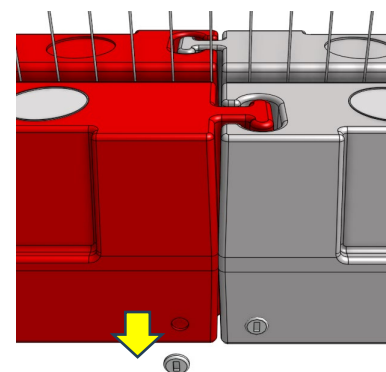

DRAIN: Insert mesh panel into Rota Slot and align ends as shown

DATA SHEET

WARNING: FAILURE TO FOLLOW THESE GUIDELINES COULD RESULT IN INJURY OR DEATH

First Fence always recommends that a site survey and a full risk assessment must be carried out before using the equipment.

It is the responsibility of the end user to make sure the system is suitable for their intended use. The system must be installed by an experienced and competent person and inspected regularly.

1. Tipping and sliding values, where provided, are as guide only and It is the customers responsibility to ensure the barrier and fencing system selected is suitable for their specific location.
2. The system should be installed on a flat, level surface.
3. Water ballast must be added to the correct level as indicated in the data sheet.
4. Water ballast level must be regularly checked and maintained to the fill level.
5. Connecting steel work and fencing systems must be regularly inspected for cracks of faults and replaced if faulty.
6. Connecting steel work fasteners must be regularly inspected for tightness.
7. In unsupported areas such as gates addition ballast may be required