

Chain Link Fencing Installation Guide

Understanding Post Types



These provide support and stability between the end posts. We recommend these to be spaced 3 metres apart.

End Strainer Posts



Place these at the end of every run to support and stabilise your fencing



Installation

Once the posts are positioned, install high tensile wires from one termination post to the next, tensioning them by hand with the provided winders. Final tensioning will be done after securing the stretcher bars and chain link.



Ferrule winder being mechanically fixed to the hole on the RSA post. The long thread passes through and is fastened with a nut.



Attachment of line wire into the ferrule winder end hole and into the spigot.

Call our Expert Sales Team for more information.

First Fence Ltd | Kiln Way, Woodville, South Derbyshire, DE11 8EA 01283 512 111 | www.firstfence.co.uk | sales@firstfence.co.uk



Corner Strainer Posts



Position these at corners or any change of direction.

Two-Way Strainer Posts



Use these on straight runs, every 30m.

Installation Depth Guidance

Post Height (Installed)	Post Height (Total)	Amount in the ground
900mm	1500mm	600mm
1200mm	1800mm	600mm
1500mm	2100mm	600mm
1800mm	2400mm	600mm
2400mm	3200mm	800mm
2750mm	3600mm	850mm

We suggest two bags of Post Mix or similar product per post.

For every 25m roll, use 8 posts spaced 3.0m apart. Place end posts at the beginning and end, intermediates between them, corners to turn, and add two-way strainers every 30m on straight sections.



Step-by-step installation guide



Weaving Rolls Together

To weave rolls together, interlock the spirals. To remove a weave, unbend the twisted ends and unscrew it. To add one, lay both rolls flat and spin the weave through full diamonds in each. Twist or re-knuckle the ends to secure. To remove excess fabric, open the top and bottom loops of a single strand of wire, then unwind the strand up through the links until the fabric comes apart.

