



Swing Barrier Single Leaf Installation Guide

Step 1

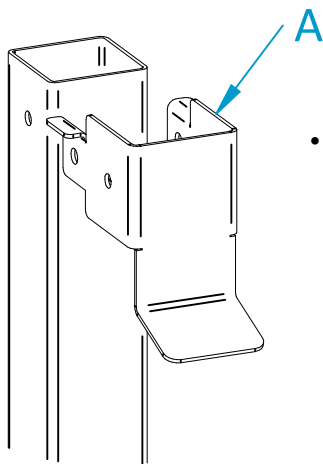


- To Install the catch post sleeve assembly Firstly line the holes up in part A to the holes in the 80x80 post.

Step 2

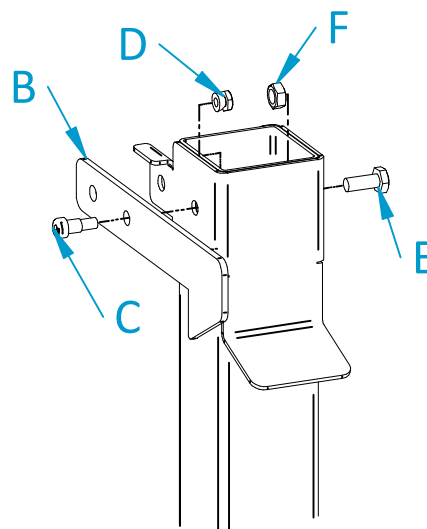


- To install part B locate parts C & D to securely fix part B via the allocated hole, ensuring the shear nut snaps off to prevent removal.
- Locate part E & F and securely tighten via the allocated hole.

Step 3

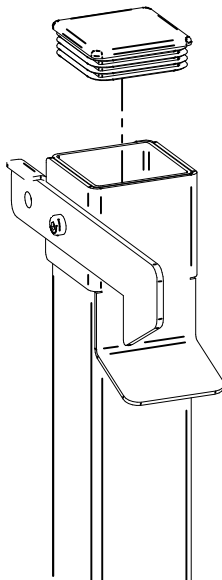

- Now that the sleeve assembly is securely fitted the plastic insert can be fitted.

Step 4

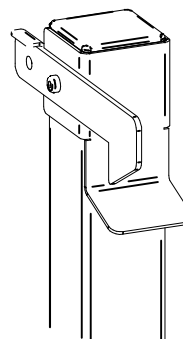

- The sleeve assembly can be installed with the latch on either the left or right hand side of the post.

