


Installation Guide


Mesh Fencing

Follow our installation guide below to erect your Mesh Fencing system.

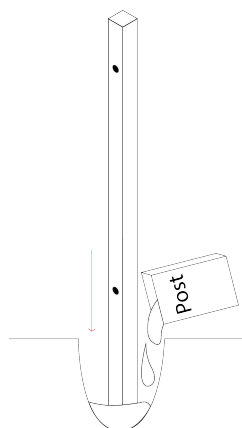

Step 1 Dig-In Posts

Dig the foundation holes 500mm deep and 350 x 450mm wide for the posts. Ensure the holes are spaced a bay width apart. Now the posts can be set into the foundation holes.

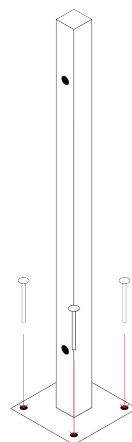


Step 1 Bolt Down Posts


Fix your Bolt Down Posts to the ground using the appropriate Through Bolts.*

**Please note that the installer is responsible for choosing the right type of Through Bolts for Bolt Down Posts.*

Step 2

Place the mesh panel in front of the secured post and prepare the mesh clips for installation.

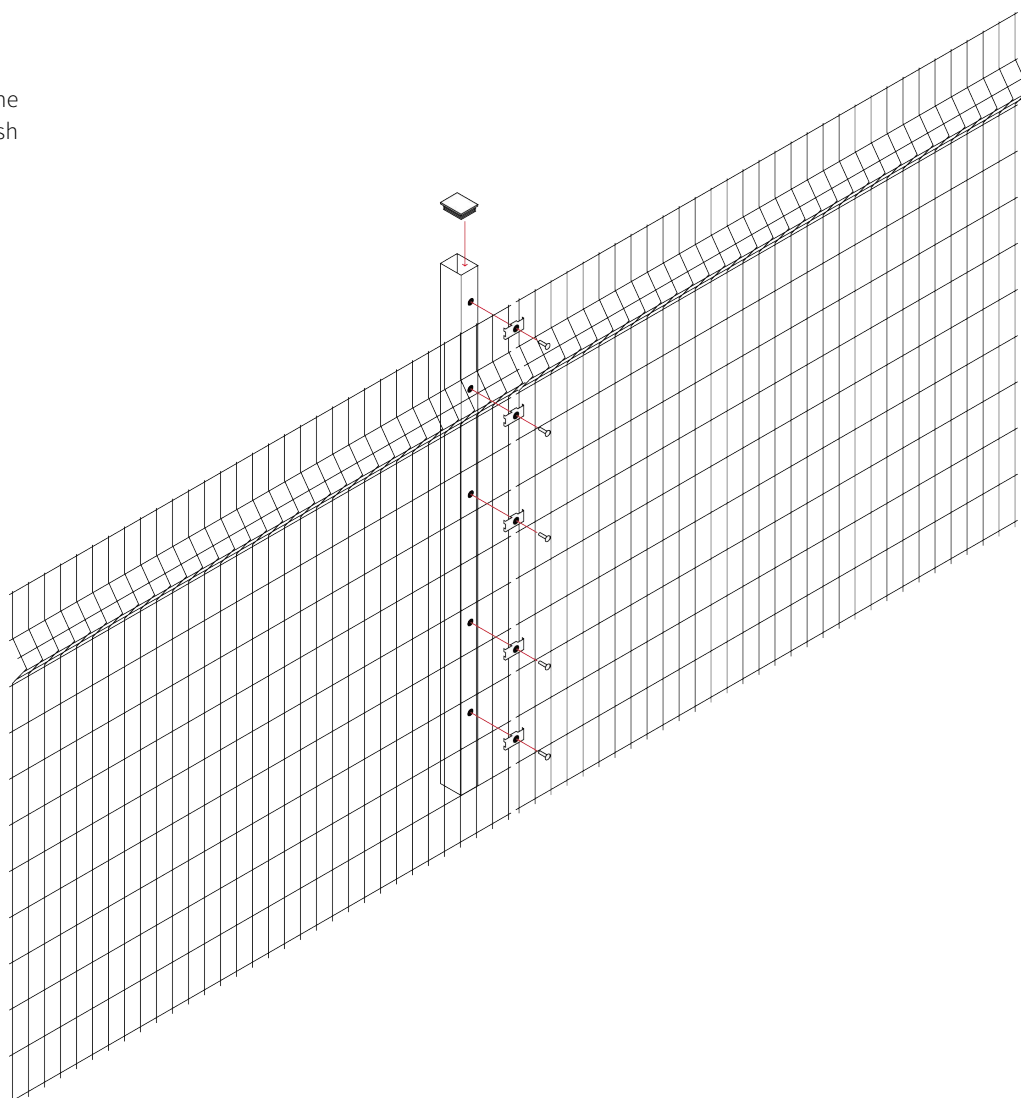

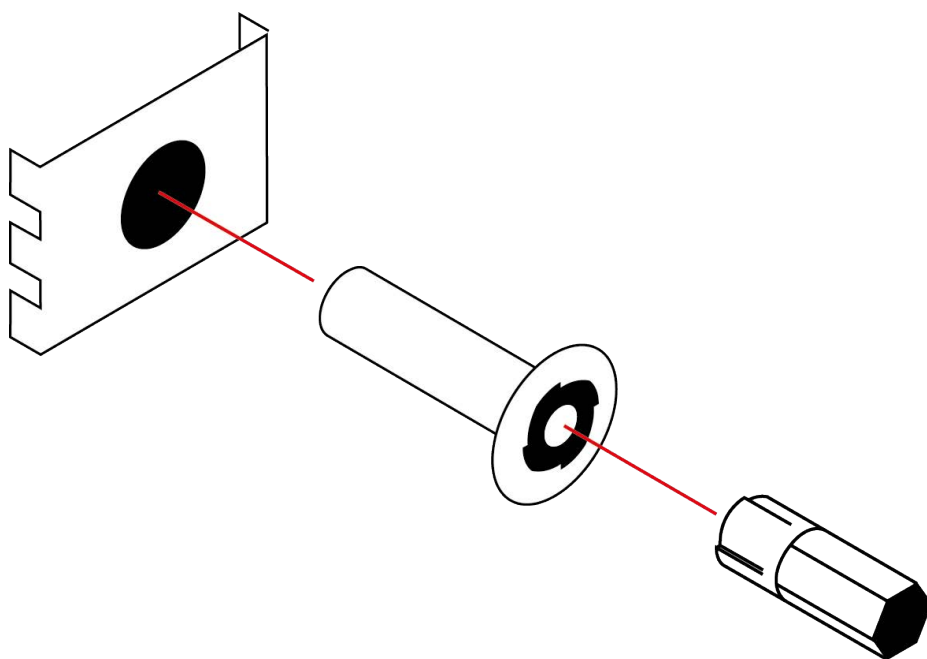

Step 3

The clips are secured onto the fencing using the specialist bolt and Torque Screw.

Step 4

Check that all the bolts are correctly tightened. Your Mesh Fencing is now ready.

