

Step 1

Place the lock plate onto the front face of the primary gate leaf, this can be either leaf of your choosing.



Step 2

Place the lock body of your chosen lock in the aperture of the lock plate.



Step 3

Place the gate keep plate on the outer edge (slam style) of the primary gate leaf, ensure faced in the correct direction to suit the swing.



Step 4


Secure the keep, lock plate and lock together with the supplied M8 x 90mm bolts.



Call our Expert Sales Team for more information.

Step 5

Rotate the latch bolt clockwise and ensure 15mm of latch is protruding. Always ensure the taper of the latch is pointed in the direction of gate travel.

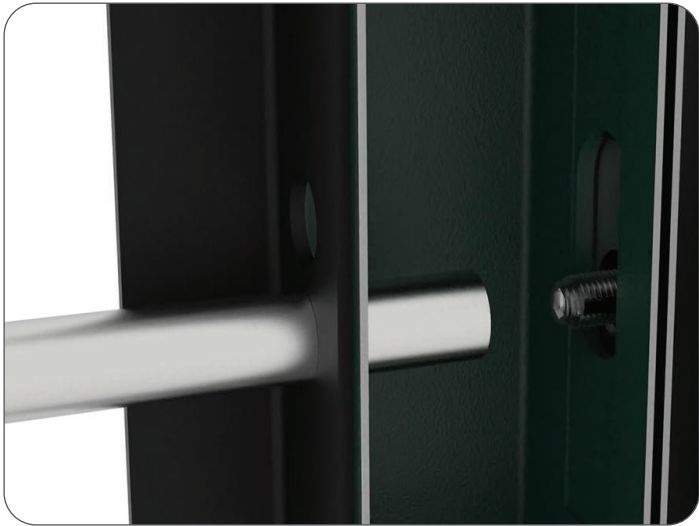

Step 6

Lock the latch bolt into position with the supplied 5mm long neck allen key.



Step 7

Locate the blank locking plate into the aperture of the second gate leaf.



Step 8

Locate the second half of the secure keep and place on the outside face of the slam style of your second leaf. Secure the keep to the gate frame and locking plate with the supplied M8 x 75mm square cup head fixings and shear nuts.



Call our Expert Sales Team for more information.