

## Step 1

Place the lock plate onto the front face of the gate leaf.



## Step 2

Place the lock body of your chosen lock in the aperture of the lock plate.




## Step 3

Place the gate keep plate on the outer edge (slam style) of the gate leaf.



## Step 4

Secure the keep, lock plate and lock together with the supplied M8 x 90mm bolts.

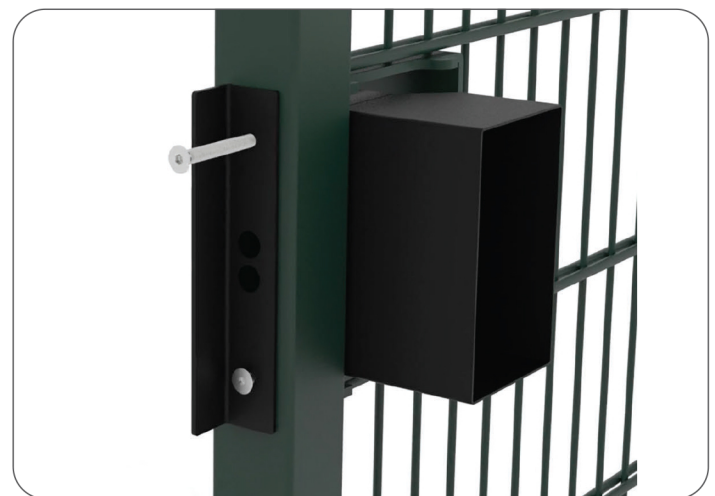

Call our Expert Sales Team for more information.

### Step 5

Rotate the latch bolt clockwise and ensure 15mm of latch is protruding. Always ensure the taper of the latch is pointed in the direction of gate travel.



### Step 6

Lock the latch bolt into position with the supplied 5mm long neck allen key.



### Step 7

Locate the second part of the keep into the catch post. Install using the M8 square cup head bolts (100mm bolt for 80mm post or 120mm bolt for the 100mm post). Please note, the expanding fasteners supplied with the keep will not work with this set up. These can be disposed of.



Call our Expert Sales Team for more information.